Ford SYNC4 Camera Video interface Art. 300390

Version: JAN 2024 (AHD compatible)




Compatibility: Ford Sync4 systems with 12 and 13.2 inch touchscreen

Product Application:

- Add reverse camera (CVBS / AHD PAL/NTSC/720P/1080P)
- Dynamic Guidelines and Mix OEM PDC*
- Add front camera
- Add video inputs, like DVD etc.

What is in the box:

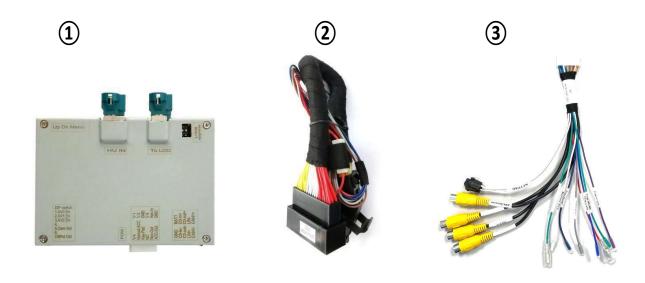




Item	Qty	Description	Part No.
1	1	Interface main box	
2	1	Main power + CAN cable	
3	1	Video-inputs cable	
4	1	LVDS cable	
5	1	External switch	


Installation:

The installation is plug and play, and the LVDS cable and power/CAN-cable should be connected <u>behind the navi unit</u> as below diagram.

Remark: Ford Transit head unit is placed above the glove box!

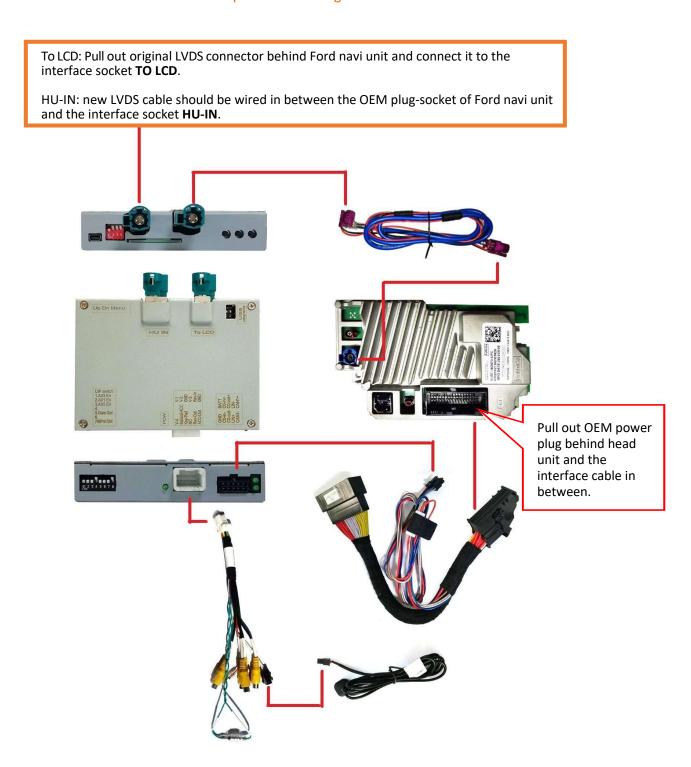

Dip settings:

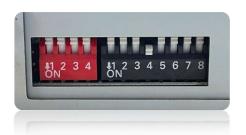

DIP-8 Settings:

DIF-8 3e	DIP Down=ON	DIP UP=OFF	DIP ON I
DIP	ON	OFF	Default
1	V1 (Right) = ON	V1 (Right) = OFF	UP(OFF)
2	V2 (Left) = ON	V2 (Left) = OFF	UP(OFF)
3	Front cam enabled (show front cam 10s after reverse)	Front cam disabled	UP(OFF)
4	Aftermarket REAR camera	OEM rear camera	DOWN (ON)
5	Not used	Not used	UP(OFF)
6	Not used	Not used	UP(OFF)
7	Dynamic Guidelines ON (depending on CAN protocol)	Guidelines off	UP(OFF)
8	PDC icon ON	PDC icon off	UP(OFF)

DIP-4 Settings:

- Cottings	DIP Down= ON	DIP UP= OFF	
DIP	FUNCTION		Default
Dip1	OFF = 13,2 inch	ON = 12 inch	UP (off)
Dip 2+3+4	Must be OFF		UP (off)

Video inputs:

- Reverse CAM (V4): insert video aftermarket Rear camera
- Front CAM (V3): insert video Front camera
- Left CAM (V2): insert video left camera or another video source
- Right CAM (V1): insert video right camera or another video source

Trigger wires:

- Green Trig-Rear*: insert +12V reverse light signal (power signal must be stable)
- White Trig-Front: insert +12V to activate the front camera (optional).
 Front camera also switches in automatically after driving backwards, and also by short-press switch button (included).
- Blue Trig-Left: insert +12V to activate the video image of AV2
- Blue/black Trig-Right: +12V to activate the video image of AV1
- *Usually the reverse function is detected by CANbus and it's not needed to connect the green trigger wire to reverse.

Additional power wires:


- Green CAM POWER 12V: provides 12V to power the camera if reverse function works by CANbus.
- Red ACC OUT: provides 12V while ignition is on (when CANbus running)
- Purple Manual ACC: only use when interface is disconnected from CANbus.

MENU settings:

- Press MENU button to show the settings (in camera picture mode).
- Use UP and DOWN buttons to adjust a setting.
- Press MENU button repeatedly to go through the menu options.




OSD settings for each video channel (independent):

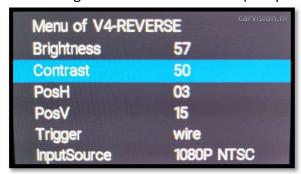

- Brightness / Contrast: adjust image performance
- PosH / PosV: move the picture on the display to left, right, up, down
- Trigger: choose between Wire or CANbus.
 Wire = use trigger wire to activate a video input
 CAN = detect by CANbus (CANbus functionality cannot always be guaranteed)
- InputSource: choose the right video system depends or your camera model (PAL, NTSC, 720P NTSC, 720P PAL, 960P NTSC, 960P PAL,1080P NTSC,1080P PAL)

Front cam additional function:

Select the desired delay-off time under *Trigger*: 5 sec, 10 sec, 15 sec. 20 sec.

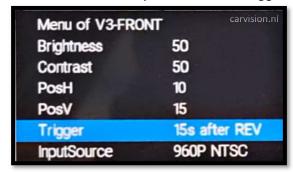

InputSource examples:



