

# MediaNav (LG)

Camera - Video interface for Renault / Opel / Dacia



Switchboard installation:

Be careful while unlocking flat cables. Do not use screwdrivers etc. to unlock!

After installing the flat cables correctly, fix the switch board behind the monitor housing by using the supplied screws.

**\*The front panel of MediaNav (LG) systems may be different, depends on car brand / model.**

Active needed video inputs like following:

- **CAM: DIP switch 5 down**
- AV1: DIP switch 2 down
- AV2: DIP switch 3 down


\* DIP switch 1,4,6,7,8 must set up (not used).



Camera / Video inputs:



- Yellow + red: +12V acc.
- Black: ground
- Green: +12V reverse
- White: optional (+12V, switch from OEM to AV1 / AV2)
- Grey: n.c.

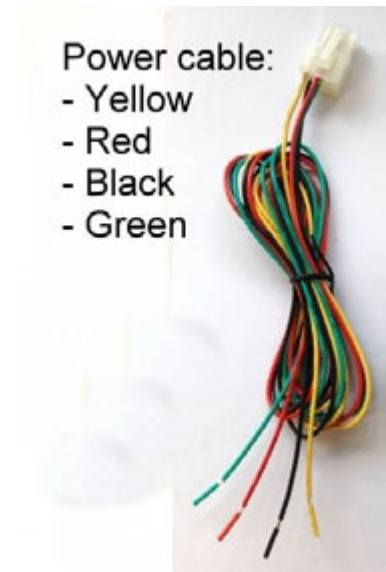

### Interface menu settings:

Installer may use the 3 keys MENU, DOWN, UP on the ( bottom or side) interface box to change external (camera) image settings if needed.



Installation example:

