


1 RGB	ON	OFF
2 VIDEO 1	ACTIVE	Not active
3 VIDEO 2	ACTIVE	Not active
4 -		
5 CAMERA	After market	OEM
6 -		
7 -		
8 *PDC	ACTIVE	Not active

* PDC image can only be switched OFF with aftermarket camera.

Long press NAV or EXIT to activate the VIDEO inputs

Rotate the TUNE wheel to fastly return to OEM screen



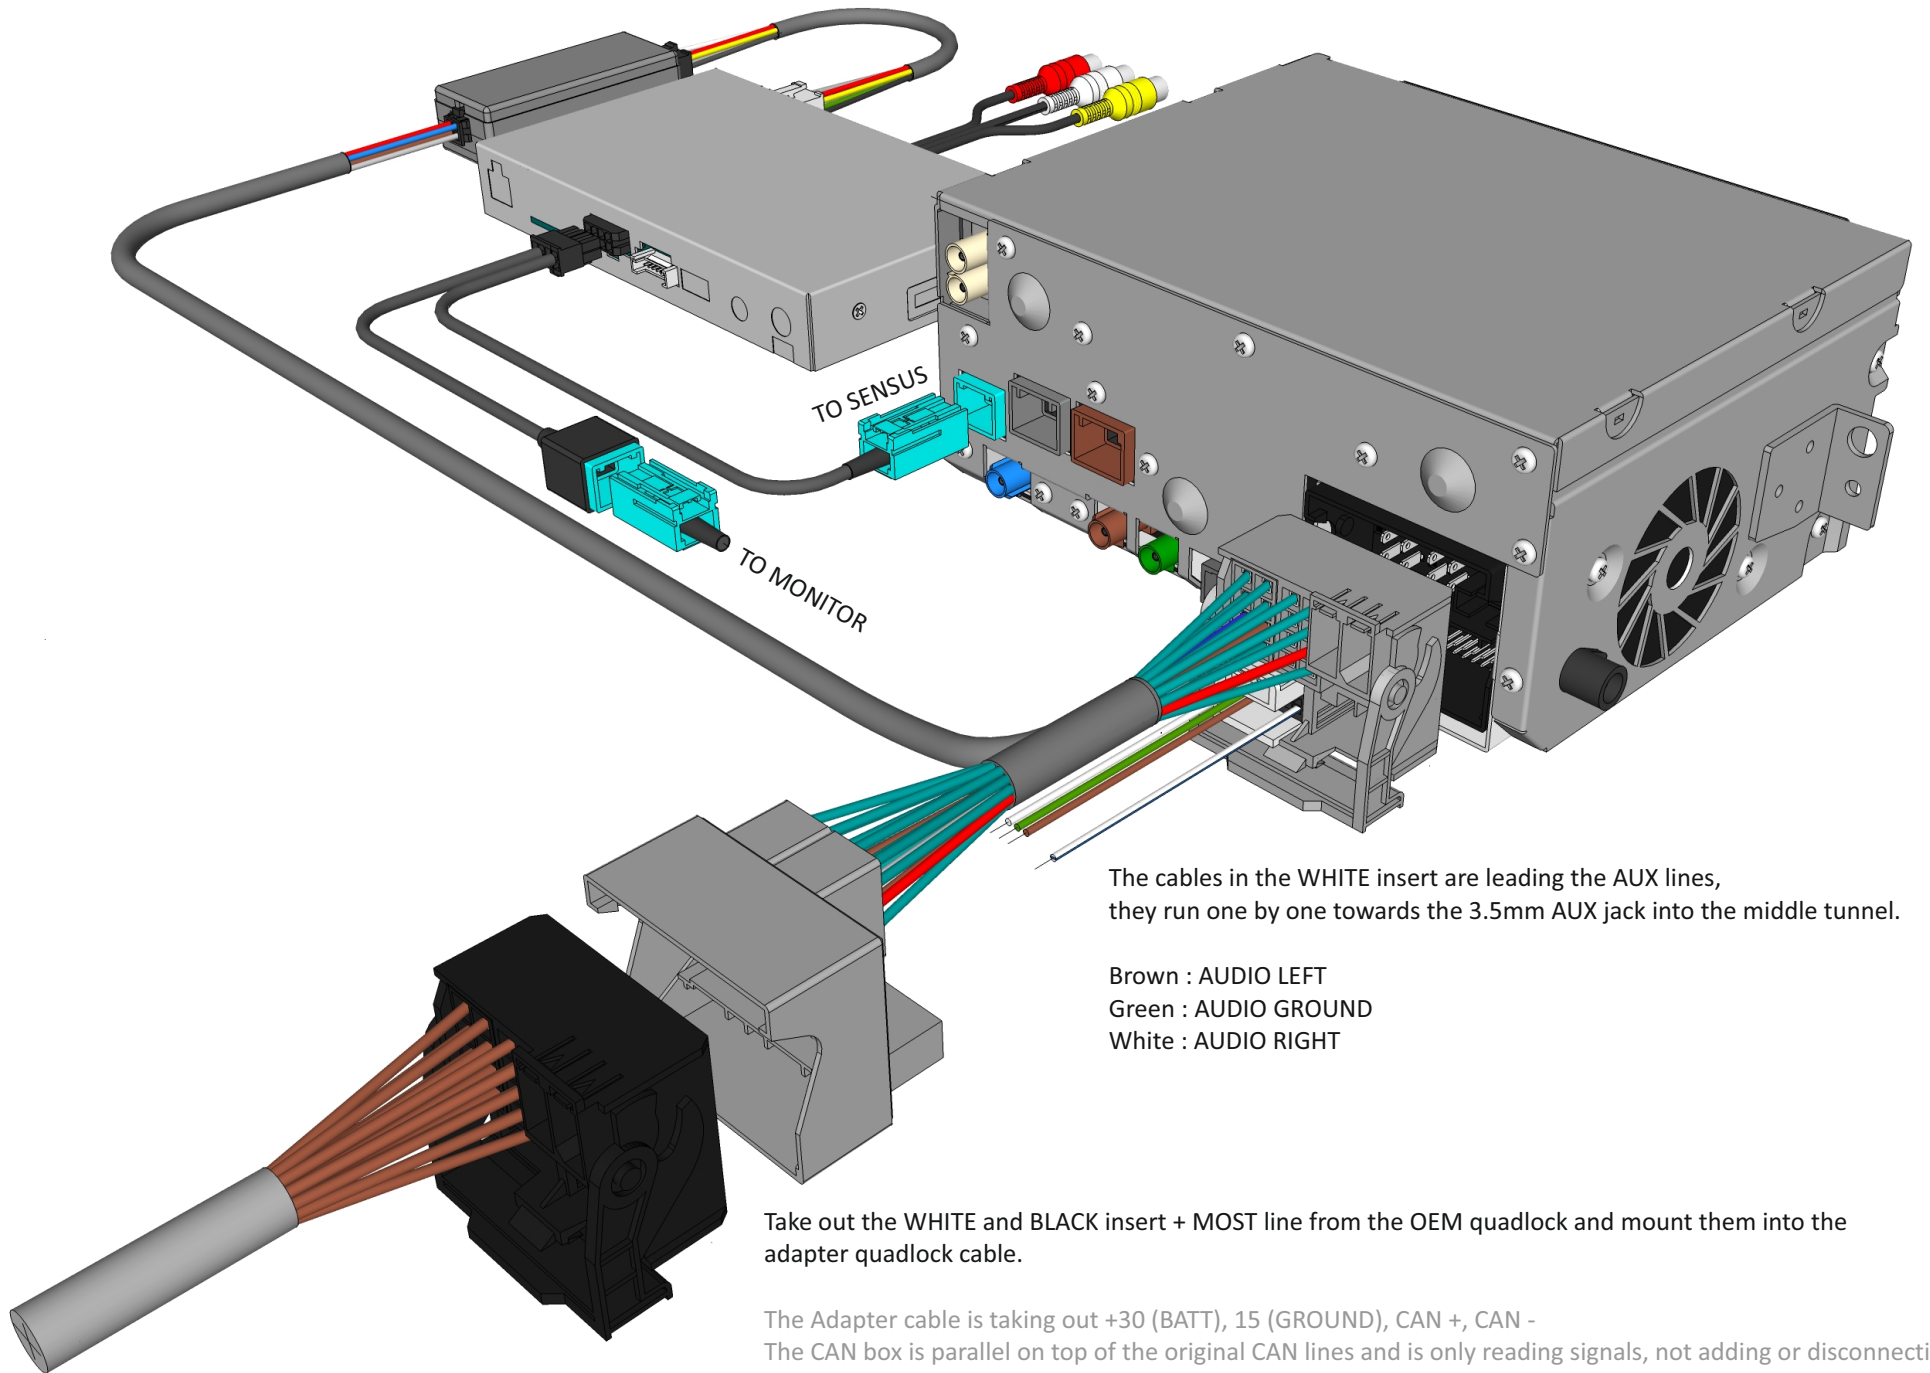

The cables in the WHITE insert are leading the AUX lines, they run one by one towards the 3.5mm AUX jack into the middle tunnel.

- Brown : AUDIO LEFT
- Green : AUDIO GROUND
- White : AUDIO RIGHT

Take out the WHITE and BLACK insert + MOST line from the OEM quadlock and mount them into the adapter quadlock cable.

The Adapter cable is taking out +30 (BATT), 15 (GROUND), CAN +, CAN -
 The CAN box is parallel on top of the original CAN lines and is only reading signals, not adding or disconnecting any original signals!!!